

2012 Electrostatics Joint Conference
Cambridge, Ontario, June 12-14, 2012

Demonstration: Measure Static Charge Using an Electrostatic Fieldmeter

Kelly Robinson, PhD, PE, IEEE Fellow
Electrostatic Answers

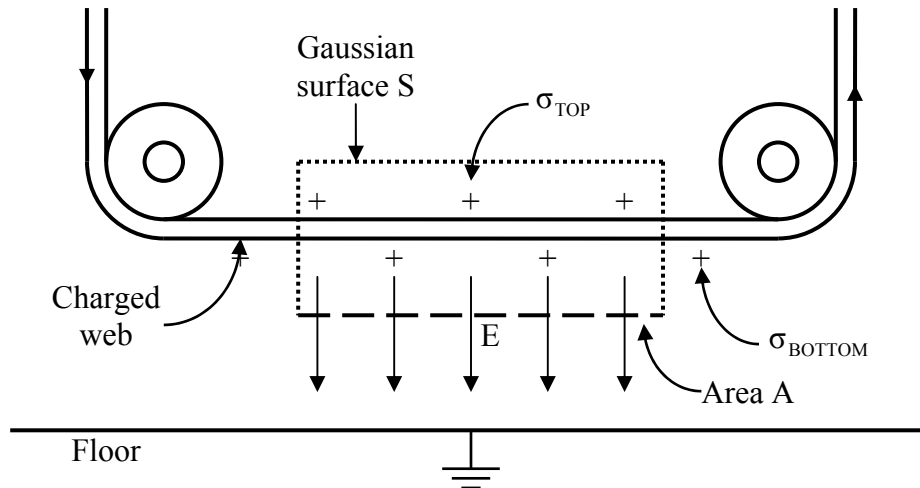


Figure 1: The electric field E is proportional to the charge on both sides of the web.

Abstract

An electrostatic fieldmeter responds to the charge on both surface of a web. The total charge density (sum of the charge densities on both surfaces) of the web is estimated using an electrostatic fieldmeter to measure electric field E . The electric field penetrating Gaussian surface S is proportional to the total enclosed charge as in (1).

Gauss's Law
$$\oint_S \epsilon_0 \vec{E} \cdot d\vec{s} = q_{\text{ENCLOSED}} = (\sigma_{\text{TOP}} + \sigma_{\text{BOTTOM}})A \quad (1)$$

Evaluate the integral in (1) to obtain (2).

$$\epsilon_0 E A = (\sigma_{\text{TOP}} + \sigma_{\text{BOTTOM}})A \quad (2)$$

Solve for the sum of the charge densities in (2) to obtain (3).

$$\sigma_{\text{TOP}} + \sigma_{\text{BOTTOM}} = \epsilon_0 E \quad (3)$$

In (4), an electric field of 1 KV/cm (1×10^5 V/m) results from a charge density of about $1 \mu\text{C}/\text{m}^2$ (1×10^{-6} C/m²).

$$\begin{aligned} \sigma_{\text{TOP}} + \sigma_{\text{BOTTOM}} &= \left(8.9 \times 10^{-12} \frac{\text{F}}{\text{m}} \right) \left(1.0 \times 10^5 \frac{\text{V}}{\text{m}} \right) \\ &= 8.9 \times 10^{-7} \frac{\text{C}}{\text{m}^2} = 0.89 \times 10^{-6} \frac{\text{C}}{\text{m}^2} = 0.89 \frac{\mu\text{C}}{\text{m}^2} \approx 1 \frac{\mu\text{C}}{\text{m}^2} \end{aligned} \quad (4)$$

In this demonstration, the charge Q on an insulating $5\text{ cm} \times 20\text{ cm}$ PVC sheet having a surface area A of 100 cm^2 will be measured using a Faraday cup and a nano-Coulombmeter. Suppose the charge Q measures 100 nC . The charge density σ_{SHEET} is estimated in (5) to be $10\text{ }\mu\text{C}/\text{m}^2$.

$$\sigma_{\text{SHEET}} = \frac{Q}{A} = \frac{100\text{ nC}}{100\text{ cm}^2} = \frac{0.100\text{ }\mu\text{C}}{0.01\text{ m}^2} = 10\frac{\mu\text{C}}{\text{m}^2} \quad (5)$$

Next, the electric field near the sheet will be measured with an electrostatic fieldmeter. For a charge density of $10\text{ }\mu\text{C}/\text{m}^2$, the electric field E is estimated in (6) using (3) to be $11\text{ KV}/\text{cm}$.

$$E_{\text{SHEET}} = \frac{\sigma_{\text{SHEET}}}{\epsilon_0} = \frac{\left(10\frac{\mu\text{C}}{\text{m}^2}\right)\left(10^{-6}\frac{\text{C}}{\mu\text{C}}\right)}{8.9 \times 10^{-12}\frac{\text{F}}{\text{m}}} = 1.1 \times 10^6\frac{\text{V}}{\text{m}} = 11\frac{\text{KV}}{\text{cm}} \quad (5)$$

Given a fieldmeter reading of $1\text{ KV}/\text{cm}$, the charge density is approximately $1\text{ }\mu\text{C}/\text{m}^2$ with an accuracy of about 11%.

Estimate

$$E = 1\frac{\text{KV}}{\text{cm}} \Rightarrow \sigma_{\text{SHEET}} \approx 1\frac{\mu\text{C}}{\text{m}^2} \quad (6)$$

Three important insights are:

1. The electrostatic fieldmeter responds to the charge on both sides of the web.
2. Electrostatic fieldmeter measurements do not reveal which side of the sheet is charged.
3. The electric field may be measured from either side of the sheet. The readings from either side should be identical.